

Tuning Fork Crystal



The tuning fork type quartz crystal provides ultimate in size, performance and economic trade-offs. So it is used as a clock source in communication equipment, measuring instrument, microprocessor and other time management applications.

FEATURES


- Miniature package
- Low cost
- KHz frequency
- Tight tolerance
- 100 % Lead (Pb)-free and RoHS compliant




RoHS
COMPLIANT

STANDARD ELECTRICAL SPECIFICATIONS						
PARAMETER	SYMBOL	CONDITION	UNIT	MIN	TYPICAL	MAX
Frequency Range	F_O		KHz		32.768	
Frequency Tolerance	$\Delta F/F_O$	at 25 °C	ppm		± 20	
Frequency Coefficient	K	ref to 25 °C	ppm/($\Delta^\circ\text{C}$) ²			- 0.042
Operating Temperature Range	T_{OPR}		°C	- 10		+ 60
Storing Temperature Range	T_{STG}		°C	- 20		+ 70
Shunt Capacitance	C_O		pF		0.85	2
Motional Capacitance	C_1		fF	1	2	4
Load Capacitance	CL		pF		12.5	
Insulation Resistance	IR	100 V _{DC}	M Ω	500		
Drive Level	DL		μW			1
Aging (first year)	Fa	at 25 °C \pm 3 °C	ppm	- 5.0		+ 5.0
Equivalent Series Resistance(ESR)	Rs		K Ω			50

DIMENSIONS in inches [millimeters]

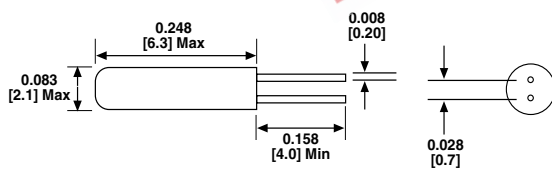

PARABOLIC TEMPERATURE CURVE

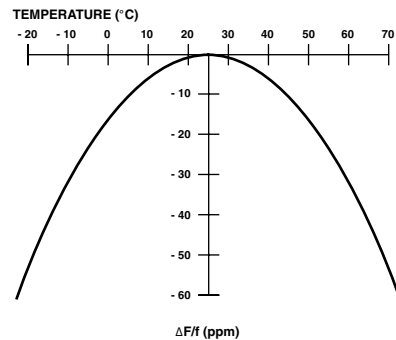

To determine frequency stability, use parabolic curvature (k).
 For example: What is stability at 45 °C?

- 1) Change in Temperature (°C) = 45 - 25 = 20 °C
- 2) Change in Frequency = - 0.042 ppm*($\Delta^\circ\text{C}$)
 = - 0.042 ppm*(20)²
 = - 16.8 ppm (max)

ORDERING INFORMATION		
XT26T	32.768 kHz	e2
MODEL	FREQUENCY/kHz	JEDEC LEAD (Pb)-FREE STANDARD

GLOBAL PART NUMBER												
X	T	2	6	T	T	A	3	2	K	7	6	8
MODEL				OPERATING TEMPERATURE		PACKAGE CODE	FREQUENCY					



GLOBAL PART NUMBERING

<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">X</td> <td style="text-align: center;">T</td> <td style="text-align: center;">9</td> <td style="text-align: center;">S</td> </tr> </table>	X	T	9	S	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">0</td> </tr> </table>	2	0	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">A</td> </tr> </table>	A	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">N</td> <td style="text-align: center;">A</td> </tr> </table>	N	A	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">4</td> <td style="text-align: center;">0</td> <td style="text-align: center;">M</td> </tr> </table>	4	0	M
X	T	9	S													
2	0															
A																
N	A															
4	0	M														
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">MODEL NUMBER</td> </tr> <tr> <td> XT9U = XT49U XT9S = XT49S XT9SL = XT49SL XT9M = XT49M XT9ML = XT49ML XTU1 = XTUM1 </td> </tr> </table>	MODEL NUMBER	XT9U = XT49U XT9S = XT49S XT9SL = XT49SL XT9M = XT49M XT9ML = XT49ML XTU1 = XTUM1	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">LOAD CAPACITANCE</td> </tr> <tr> <td> 18 = 18 pF 20 = 20 pF NL = Series to be specified by customer </td> </tr> </table>	LOAD CAPACITANCE	18 = 18 pF 20 = 20 pF NL = Series to be specified by customer	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">PACKAGE CODE</td> </tr> <tr> <td> TAPE AND REEL G = RF5 (XT9U, XT9S, XT9SL) H = RF7 (XT9M, XT9ML) BULK A = B04 (all models) </td> </tr> </table>	PACKAGE CODE	TAPE AND REEL G = RF5 (XT9U, XT9S, XT9SL) H = RF7 (XT9M, XT9ML) BULK A = B04 (all models)	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">OPTIONS</td> </tr> <tr> <td> NA = No Additional Options RR = Extended Temperature of -40 °C to +85 °C Contact factory for all other options </td> </tr> </table>	OPTIONS	NA = No Additional Options RR = Extended Temperature of -40 °C to +85 °C Contact factory for all other options	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">FREQUENCY</td> </tr> <tr> <td> 4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency </td> </tr> </table>	FREQUENCY	4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency		
MODEL NUMBER																
XT9U = XT49U XT9S = XT49S XT9SL = XT49SL XT9M = XT49M XT9ML = XT49ML XTU1 = XTUM1																
LOAD CAPACITANCE																
18 = 18 pF 20 = 20 pF NL = Series to be specified by customer																
PACKAGE CODE																
TAPE AND REEL G = RF5 (XT9U, XT9S, XT9SL) H = RF7 (XT9M, XT9ML) BULK A = B04 (all models)																
OPTIONS																
NA = No Additional Options RR = Extended Temperature of -40 °C to +85 °C Contact factory for all other options																
FREQUENCY																
4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency																
<p>Example: XT49S-20 40M</p>																
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">X</td> <td style="text-align: center;">T</td> <td style="text-align: center;">2</td> <td style="text-align: center;">6</td> <td style="text-align: center;">T</td> </tr> </table>	X	T	2	6	T	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">T</td> </tr> </table>	T	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">A</td> </tr> </table>	A	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">3</td> <td style="text-align: center;">2</td> <td style="text-align: center;">K</td> <td style="text-align: center;">7</td> <td style="text-align: center;">6</td> <td style="text-align: center;">8</td> </tr> </table>	3	2	K	7	6	8
X	T	2	6	T												
T																
A																
3	2	K	7	6	8											
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">MODEL NUMBER</td> </tr> <tr> <td> XT26T = XT26T XT38T = XT38T </td> </tr> </table>	MODEL NUMBER	XT26T = XT26T XT38T = XT38T	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">OPERATING TEMPERATURE (OTR)</td> </tr> <tr> <td> T = -10 °C to +60 °C </td> </tr> </table>	OPERATING TEMPERATURE (OTR)	T = -10 °C to +60 °C	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">PACKAGE CODE</td> </tr> <tr> <td> BULK A = B04 (all models) </td> </tr> </table>	PACKAGE CODE	BULK A = B04 (all models)	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">FREQUENCY</td> </tr> <tr> <td> 32K768 = 32.768 kHz K is used as decimal place holder in frequency </td> </tr> </table>	FREQUENCY	32K768 = 32.768 kHz K is used as decimal place holder in frequency					
MODEL NUMBER																
XT26T = XT26T XT38T = XT38T																
OPERATING TEMPERATURE (OTR)																
T = -10 °C to +60 °C																
PACKAGE CODE																
BULK A = B04 (all models)																
FREQUENCY																
32K768 = 32.768 kHz K is used as decimal place holder in frequency																
<p>Example: XT26T 32.768K</p>																
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">X</td> <td style="text-align: center;">T</td> <td style="text-align: center;">5</td> <td style="text-align: center;">7</td> </tr> </table>	X	T	5	7	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">0</td> </tr> </table>	2	0	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">A</td> </tr> </table>	A	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">4</td> <td style="text-align: center;">0</td> <td style="text-align: center;">M</td> </tr> </table>	4	0	M			
X	T	5	7													
2	0															
A																
4	0	M														
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">MODEL NUMBER</td> </tr> <tr> <td> XT57 = XT57C XT46 = XT46C XT36 = XT36C </td> </tr> </table>	MODEL NUMBER	XT57 = XT57C XT46 = XT46C XT36 = XT36C	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">LOAD CAPACITANCE</td> </tr> <tr> <td> 18 = 18 pF 20 = 20 pF NL = Series to be specified by customer </td> </tr> </table>	LOAD CAPACITANCE	18 = 18 pF 20 = 20 pF NL = Series to be specified by customer	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">PACKAGE CODE</td> </tr> <tr> <td> TAPE AND REEL H = RF7 BULK A = B04 (all models) </td> </tr> </table>	PACKAGE CODE	TAPE AND REEL H = RF7 BULK A = B04 (all models)	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">FREQUENCY</td> </tr> <tr> <td> 4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency </td> </tr> </table>	FREQUENCY	4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency					
MODEL NUMBER																
XT57 = XT57C XT46 = XT46C XT36 = XT36C																
LOAD CAPACITANCE																
18 = 18 pF 20 = 20 pF NL = Series to be specified by customer																
PACKAGE CODE																
TAPE AND REEL H = RF7 BULK A = B04 (all models)																
FREQUENCY																
4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency																
<p>Example: XT57C-20 40M</p>																



Disclaimer

All product specifications and data are subject to change without notice.

Vishay Intertechnology, Inc., its affiliates, agents, and employees, and all persons acting on its or their behalf (collectively, "Vishay"), disclaim any and all liability for any errors, inaccuracies or incompleteness contained herein or in any other disclosure relating to any product.

Vishay disclaims any and all liability arising out of the use or application of any product described herein or of any information provided herein to the maximum extent permitted by law. The product specifications do not expand or otherwise modify Vishay's terms and conditions of purchase, including but not limited to the warranty expressed therein, which apply to these products.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document or by any conduct of Vishay.

The products shown herein are not designed for use in medical, life-saving, or life-sustaining applications unless otherwise expressly indicated. Customers using or selling Vishay products not expressly indicated for use in such applications do so entirely at their own risk and agree to fully indemnify Vishay for any damages arising or resulting from such use or sale. Please contact authorized Vishay personnel to obtain written terms and conditions regarding products designed for such applications.

Product names and markings noted herein may be trademarks of their respective owners.